

WASHING MACHINE CLEANER USAGE INSTRUCTIONS

 
1

WARNING: PLEASE READ ALL USAGE AND WARNING INSTRUCTIONS ON THE WASHING MACHINE CLEANER BOTTLE BEFORE USING.



2

MAKE SURE THE WASHING MACHINE IS EMPTY AND CLOSE THE DOOR

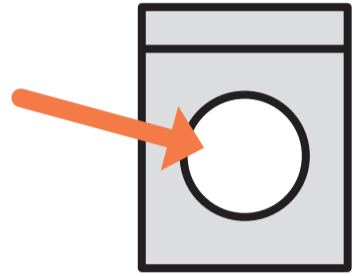


3

ADD WASHER CLEANER (see dispenser instructions below)



DISPENSER INSTRUCTIONS

 
- OPEN DISPENSER DOOR
- MAKE SURE DISPENSER COMPARTMENTS ARE EMPTY
- POUR 1/2 BOTTLE OF THE CLEANER IN MAIN WASH AND THE REMAINDER OF THE CLEANER IN THE BLEACH COMPARTMENT
- CLOSE DISPENSER DOOR

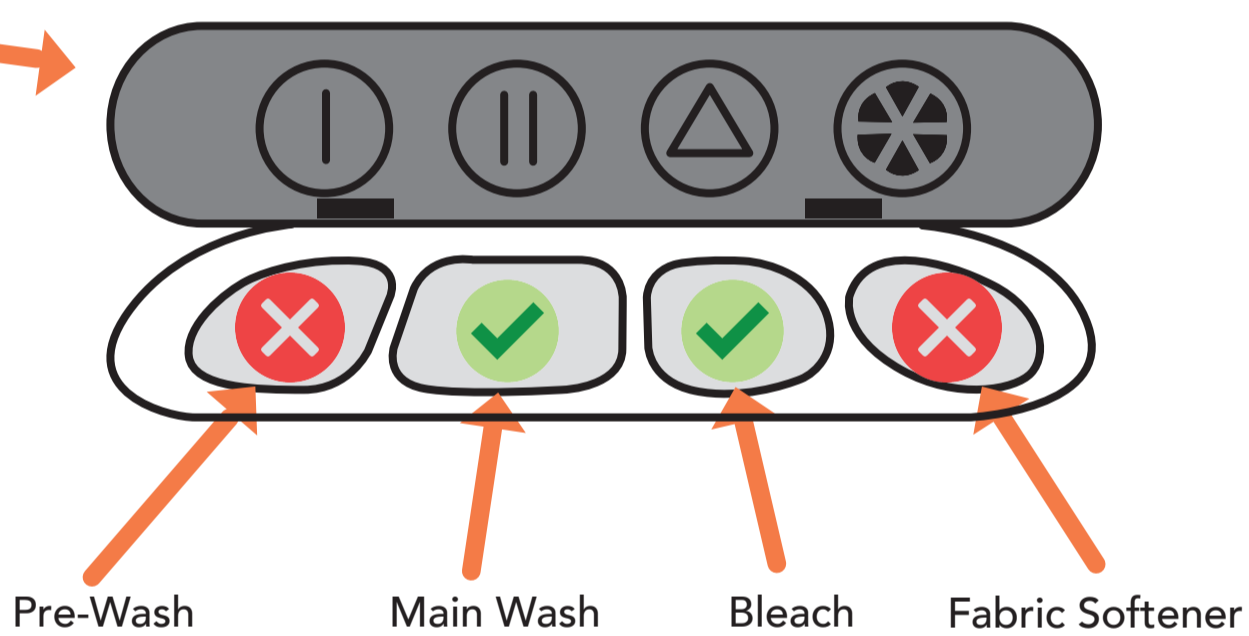

4

SELECT HOT WASH TEMPERATURE CYCLE ON WASHER

 COIN WASHER MODEL

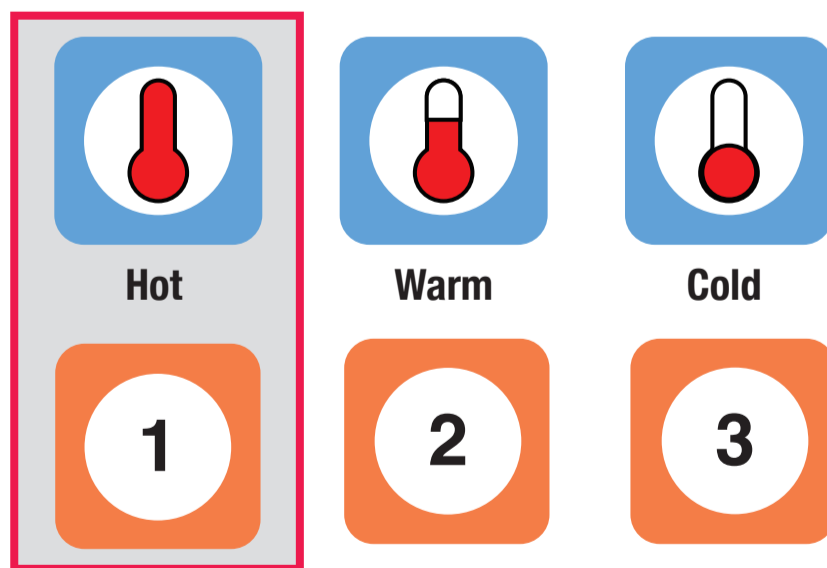

ON-PREMISE WASHER MODEL



IF YOU ARE USING AN EXTERNAL AUTOMATIC CHEMICAL DISPENSING SYSTEM - TURN IT OFF TO RUN THE WASHER IN MANUAL MODE

5

PRESS START BUTTON ON WASHER

IF YOU ARE USING AN AUTOMATIC DISPENSING SYSTEM MAKE SURE IT IS OFF



6

ENJOY A CLEAN AND HAPPY WASHER. YOU HAVE EXTENDED ITS LIFE!

